



MCS02 Quick Guide

Mini-Control System with Standard Monitor

PA Zone Layout Colours (Public Address Page):

 green	Zone selected for Live Microphone, DVA message, or text-to-speech Announcement
 pink	Zone busy

Making Live Microphone Announcements:

1. Select the required broadcast zone or zones by clicking on the PA zone layout and/or the zone select buttons.
2. Click on the **PTT** (Press-To-Talk) button on the display.
3. Begin announcement when the **PTT** button indicator has changed to green.
 - Speak slowly and clearly.
 - Speak at a normal conversational level.
 - Position the mouth 5-10 cm from the microphone capsule.
4. Finish announcement by clicking on the **PTT** button again.

Making Pre-recorded DVA (Digital Voice Announcement) Announcements:

1. Select the required broadcast zone or zones by clicking the PA zone layout and/or the zone select buttons.
2. Click on the **Play DVA** button on the display.
3. A selection window will be displayed.
4. Select the required pre-recorded announcement and chime option.
5. Click on the **Play DVA** button.

Making TTS (Text-to-Speech) Announcements:


1. Select the required broadcast zone or zones by clicking the PA zone layout and/or the zone select buttons.
2. Click on the **Play DVA** button on the display.
3. A selection window will be displayed.
4. Enter the text in the **Quick-Text-to-Speech** field.
5. Select the required pre-recorded announcement and chime option.
6. Click on the **Play DVA** button.

Notes:

1. You cannot make zone selections while **PTT** button is active (lit up).
Click on the **PTT** button to deactivate it, if necessary.
2. Your announcement can be interrupted by higher priority announcements.
3. Recorded DVA and TTS announcements and zone selections will be queued.

Quick Guide

Alarm Summary (top of screen):

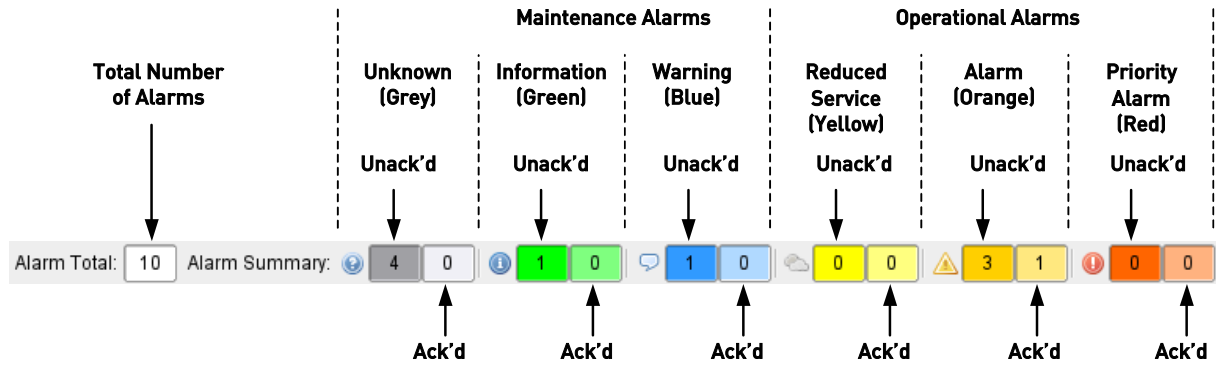

Alarm Handling (Current Alarm Status Page)¹:

The icons are also shown next to the affected station on the Public Address page.

Icon	Background Colour	Type	Acknowledgement	Operator's Action	Corrective Action	Priority
	Grey (dark)	Unknown	Unacknowledged	Unknown	Refer to maintenance staff for investigation	Lowest Highest
	Grey (pale)	Unknown	Acknowledged			
	Green (bright)	Information	Unacknowledged	No operational effect		
	Green (pale)	Information	Acknowledged			
	Blue (bright)	Warning	Unacknowledged			
	Blue (pale)	Warning	Acknowledged			
	Yellow (bright)	Reduced Service	Unacknowledged	Operational disruption. Alternate operating procedures required.	Refer to maintenance staff for priority investigation	
	Yellow (pale)	Reduced Service	Acknowledged			
	Orange (bright)	Alarm	Unacknowledged	Life safety response with major operational disruption. Alternate operating procedures required.	Refer to maintenance staff for immediate investigation	
	Orange (pale)	Alarm	Acknowledged			
	Red (bright)	Priority alarm	Unacknowledged			
	Red (pale)	Priority alarm	Acknowledged			

Listening to Station Announcements (Listen-in Page)¹:

1. Select the appropriate station by clicking the PA zone layout.
2. Click on the **Listen-in Enabled** button.

Zone Overrides Page¹:

Sets the maximum broadcast volume at each station.

DVA Management Page¹:

Records and maintains stored DVA and TTS messages.

Current Status Page¹:

Shows all alarms by station in a hierarchical tree view.

Scheduler Page¹:

Sets automated DVA broadcast schedules.

Current Alarm Status Page¹:

Lists all the system alarms.

Alarm Event History Page¹:

Lists all alarm events reported to the system.

¹ Access to page is restricted by user logon access level.

Manufacturer

Application Solutions (Safety and Security) Limited
 Unit 17 - Cliffe Industrial Estate - Lewes - East Sussex
 BN8 6JL - U.K.
 www.asl-control.co.uk



All rights reserved.

Information contained in this document is believed to be accurate, however no representation or warranty is given and Application Solutions (Safety and Security) Limited assumes no liability with respect to the accuracy of such information.